
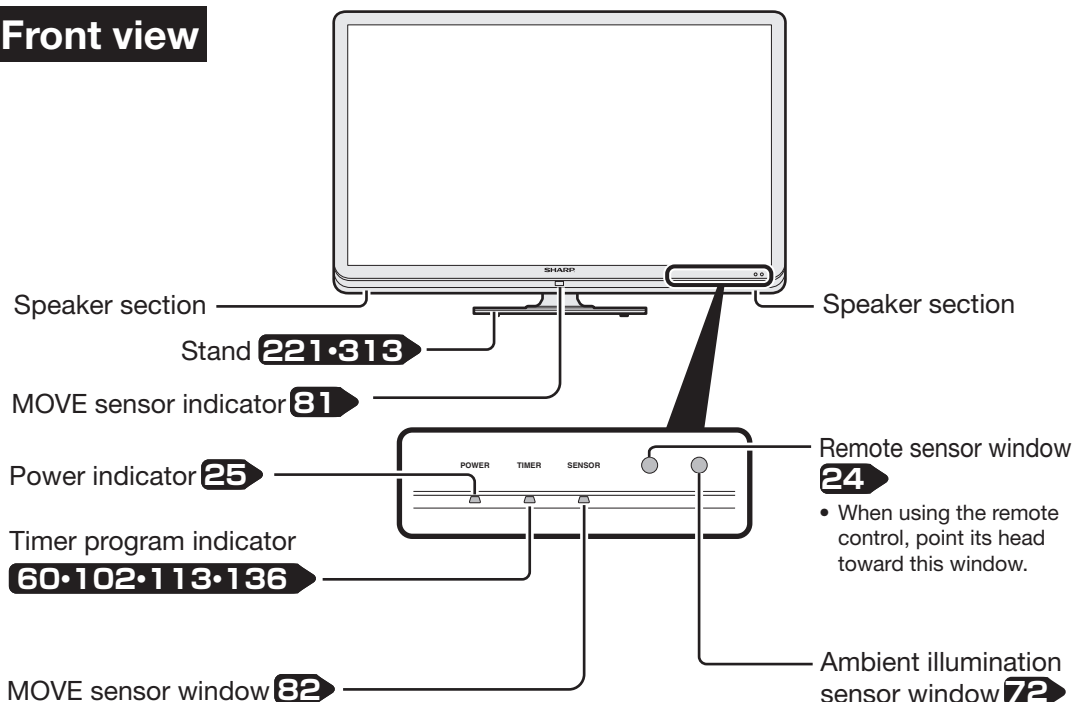


English Guide


Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

Front view



Right side view

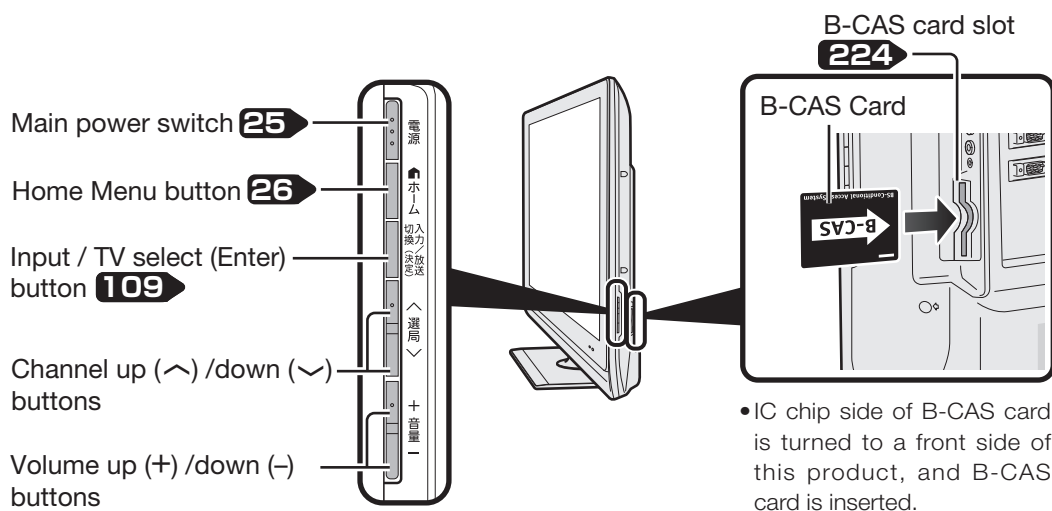

Back view

The illustrations below are those of LC-52DZ3.

LC-46DZ3/LC-40DZ3/LC-32DZ3 has the same layout of jacks and terminals as LC-52DZ3.

LAN jack

(10BASE-T/100BASE-TX)

157・185

Connect a Blu-ray
Disc player,
AV amplifier, etc.

AV in 1・2 and 3 (HDMI)

**107・230・231・
233・234・236・
238**

AV in 4 (D5)

233・235・236

RS-232C

239

AV in 6 (PC)

239

PC input (audio)

120・238・239

AV in 5 /Audio out

**233・235・
236・237**

Digital audio
output jack (optical)

231・237

BS-CS 110 antenna
input terminal

226~229

VHF-UHF antenna
input terminal

226~229

USB terminal

124・161・213・293

Headphones jack

Remote Control Unit

See Page 31 for how to select a program.

Active/Standby 25

Press to engage the TV set in the active or standby mode.

Recommended programs select 49~50

Press to select a program which the TV set recommends.

Power saving mode 86

Select power saving settings.

CATV 33

Digital channel number input

Display 35•36•298

Press to display or turn off the channel call, etc.

AV mode select 67

Freeze 37

Channel select 31•189

- Press to select a channel.
- Use to input a number for various settings.

Terrestrial Digital/BS/CS/

Terrestrial analog 31

Select the CS digital channel for the first time. 247

Mute 31•189

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (-) 31•189

Press to adjust the volume.

EPG 42•102•136

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

Finish

Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Sleep timer 83

Media select 31•34•190

Familink

100•101~104•107•133•134•135•145•146~148

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Display the operation panel of VOD 194•199•209

View the Internet or IPTV 175•189•193•195•198

Audio select 51•52•190

Picture select 52

Caption 52•190

Split screen 54~55

Press to switch between the split screen mode and the normal screen mode.

Operable screen 56

Press to switch the operable screen when the TV set is in the split screen mode.

Input select 109

Channel up (Δ)/down (∇) 31•40•189•265

Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Display the "Home" Menu 26•27

Cursor (up, down, left, right) 26•27

Enter/Confirm 27


Return

Display the Tool Menu 30

Linked data broadcast 34•190

Color 34•43•44•90

Use to operate EPGs and data program screens.

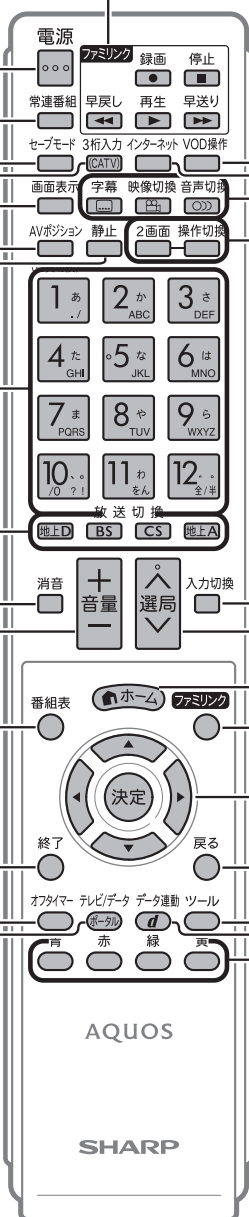

Switching the Display Language to English ホームメニューなどの言語を英語にする


- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



◇ おしらせ ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press
ホーム
and
select
with



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



2

Select
with



Select “ (視聴準備)” (View Setting).

 (視聴準備)を選ぶ



3


Select
with



Press



Select “Language(言語)”.
「Language(言語)」を選ぶ

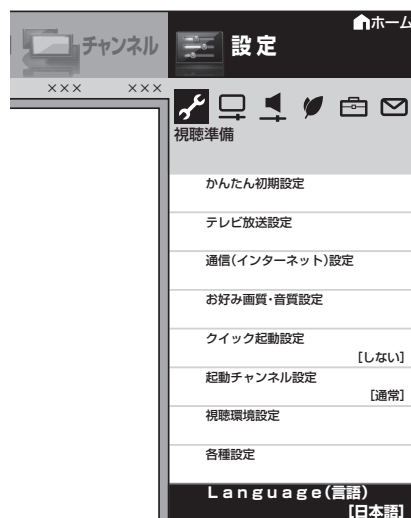

4

Select
with



Press



Select “English”.
「English」を選ぶ

Enter.
決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

5

Press



Finish this operation.
終了する

はじめに
お読みください

テレビを見る／
便利な使いかた

ファミリーリンク

ビデオ・オーディオ・
パソコンをつなぐ

USBハードディスク
をつないで録る・見る

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や素子)

English
Guide